

Controls (Cont.)

TurboCool and TurboFreeze

During TurboCool, refrigerator temperature can reach 33°F (0.6°C). During TurboFreeze, freezer temperature can reach 13°F (-10.6°) if room temperature is above 73°F (22.8°C), -7°F (-21.7°C) if room temperature is below 73°F (22.8°C).

To enter **TurboCool** or **TurboFreeze** or both, press **mode**. **TurboCool** will light up. If you leave without pressing any button, **TurboCool** will be set. Pressing mode a second time will light up **TurboFreeze**; leave without pressing any button, **TurboFreeze** will be set.

Pressing mode a third time will light up both **TurboCool** and **TurboFreeze**; leave without pressing any button, both functions will be set.

To exit Turbo functions, press **mode** again.

NOTE: During Turbo modes, the refrigerator or freezer temperature can be adjusted.

Lock

Press the **lock symbol**, hold for 3 seconds. The circle around the lock symbol will light up and the control display will be locked. Buttons will not be active.


To exit the lock, press the **lock symbol** again and hold for 3 seconds. The light around the lock will go off.

NOTE: The display will turn off after 30 seconds if the control display has not been touched. Touch any button on the control panel and it will display again.

Sabbath Mode

Open the door when display is locked, press the **Zone Select** and **Temp Control** simultaneously for 5 seconds to enter and exit Sabbath mode. Activate Sabbath Mode to turn off interior lights, temperature control and advanced features. The compressor will run on a timed defrost when in Sabbath Mode. Sabbath Mode will last for 76 hours if you do not manually exit the mode.

Shelves and Pans

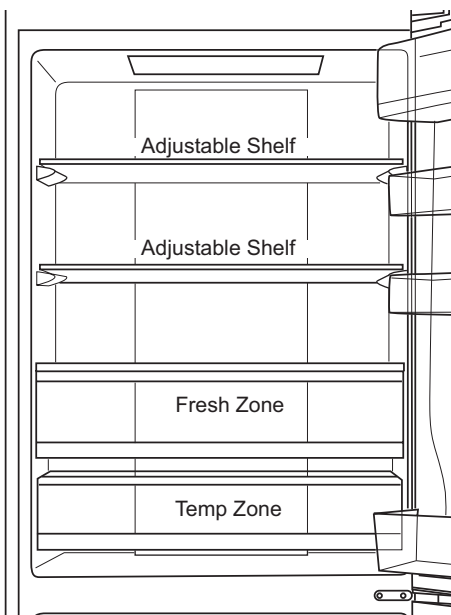


CAUTION Do not clean glass shelves or covers with warm water when they are cold. Glass shelves and covers may break if exposed to sudden temperature changes or impact such as bumping or dropping. Tempered glass is designed to shatter into many small pieces if it breaks.

NOTE: Do not block air outlet by placing food items directly against it. Erratic temperatures may result.

Adjustable Shelves

The height of the shelves can be adjusted to fit your storage needs.

1. To relocate a shelf, lift the back edge first and pull the shelf forward.
2. To reinstall, put the shelf on the lugs on both sides and push it back until the shelf slides into the slots.

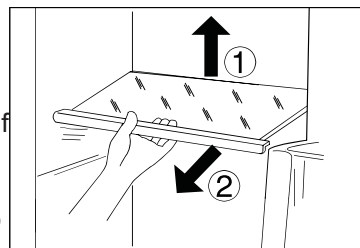


Fresh Zone Pan

This pan can use for storing vegetable, fruit, snack etc.

TempZone Pan

Adjust the pan temperature through temperature control panel. This pan can have 3 temperature settings 32°F, 34°F, 36°F (0°C, 1.1°C, 2.2°C) and can be used as meat, beverage and deli storage.

To remove pan, pull out pan (1), lift the pan cover slightly (2), tilt the pan up (3), pull the pan out (4).

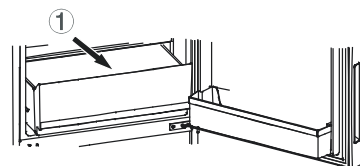

To remove the pan cover, lift the back edge and pull forward.

