

Using the Sabbath Mode - LREN6325XE

Top > OPERATION > Oven > Using the Sabbath Mode

Using the Sabbath Mode

Sabbath mode is typically used on the Jewish Sabbath and Holidays. When the Sabbath mode is activated, the oven does not turn off until the Sabbath mode is deactivated. In Sabbath mode, all function buttons are inactive. sb will appear in the display.

NOTE

If the oven light is turned on and the Sabbath mode is active, the oven light will turn off. If the oven light needs to be off, be sure to turn the oven light off before activating the Sabbath mode. Sabbath mode can only be used in Bake mode.

Setting the Sabbath mode

Press the Bake button.

Set the desired temperature using the number buttons.

Press the START button.

Press and hold the Settings button for three seconds.

NOTE

sb will appear in the display when the Sabbath mode is activated.

To cancel the Sabbath mode, press and hold the Settings button for three seconds. To cancel the Bake function, press the CLEAR/OFF button at any time.