

Using the Sabbath Mode - LSEL6337XE

Top > OPERATION > Oven > Using the Sabbath Mode

Using the Sabbath Mode

Sabbath mode is typically used on the Jewish Sabbath and Holidays. When the Sabbath mode is activated, the oven does not turn off until the Sabbath mode is deactivated. In Sabbath mode, all oven function buttons and cooktop knobs are inactive. sb will appear in the display.

Disconnect the probe. The probe function is not available in Sabbath mode.

Turn the oven mode knob to select Bake.

Set the desired temperature and cook time.

Press START.

Press and hold Settings for three seconds. sb appears in the display when the Sabbath mode is activated.

To stop the Sabbath mode, press and hold Settings for three seconds. To cancel the Bake function, set the oven mode knob to the OFF position at any time.

NOTE

Sabbath mode is only available when the oven is in the Bake mode.

If a cook time is set, the oven turns off automatically at the end of the cook time, without chiming. The oven remains in Sabbath mode, but is turned off.

If no cook time is set, the oven will not automatically turn off.

After a power failure, the display will turn back on in Sabbath mode, but the oven will be off.

Always close the oven door before engaging Sabbath mode.