

- When cooking is complete, turn the oven mode knob to the **OFF** position.

#### NOTE

- To cancel the Frozen Meal function during use, turn the oven mode knob to the **OFF** position at any time.

## Slow Cook (Model LSGL5833\*, LSGL583CF, LSGL5833X, LSGL5833Z)

This feature is only available on some models.

The Slow Cook function is specially designed for grilling beef, pork and poultry. It is common for the surface of the food to darken after the completion of the Slow Cook. No preheating is required when using the Slow Cook mode.

### Setting the Slow Cook Function

- Turn the oven mode knob to select **Slow Cook**. **Hi** appears in the display.
- Press **plus(+)** or **minus (-)** to select **Hi** and **Lo**.
  - Hi: 275 °F
  - Lo: 220 °F
- Press **START**.
  - The Slow Cook function starts operation.
- When cooking is complete, turn the oven mode knob to the **OFF** position.

#### NOTE

- To cancel Slow Cook during use, turn the oven mode knob to the **OFF** position at any time.
- For best results, use a single rack in position 1 or 2.

## Remote Start

If the appliance is connected to a home Wi-Fi network, this function starts preheating and then holds the temperature for up to 12 hours (including preheating time). If the appliance is not connected to the network, **OFF** appears in the display. Follow the instructions in the Smart

Functions section to connect the appliance to the network.

## Setting Remote Start

**Model LSGL5833\*, LSGL583CF, LSGL5833X, LSGL5833Z**

- Open the oven door to make sure the oven is empty and ready for pre-heating. Close the oven door.
- Turn the oven mode knob to select **Remote Start**.
- Follow the directions in the smart phone application to set the cook mode, temperature, and run time (preheating time plus holding time).

**Model LSGL5831\***

- Open the oven door to make sure the oven is empty and ready for pre-heating. Close the oven door.
- Press **Remote Start**.
- Follow the directions in the smart phone application to set the cook mode, temperature, and run time (preheating time plus holding time).

## Using the Sabbath Mode

Sabbath mode is typically used on the Jewish Sabbath and Holidays. When the Sabbath mode is activated, the oven does not turn off until the Sabbath mode is deactivated. In Sabbath mode, all function buttons are inactive. 5b will appear in the display.

**Model LSGL5833\*, LSGL583CF, LSGL5833X, LSGL5833Z**

- Turn the oven mode knob to select **Bake**.
- Set the Bake temperature using the **+/-** keys.
- Press **START**.

## 50 OPERATION

---

- 4 Press and hold **Start Time** for three seconds. 5b appears in the display when the Sabbath mode is activated.
- 5 To stop Sabbath mode, press and hold **Start Time** for three seconds. To cancel the Bake function, set the oven mode knob to the **OFF** position at any time.

### Model LSGL5831\*

- 1 Press **Bake**.
- 2 Set the Bake temperature using the +/- keys.
- 3 Press **START**.
- 4 Press and hold **Settings** for three seconds. 5b appears in the display when the Sabbath mode is activated.
- 5 To stop the Sabbath mode, press and hold **Settings** for three seconds. To cancel the Bake function, set the oven mode knob to the **OFF** position at any time.

---

### NOTE

- If a cook time is set, the oven turns off automatically at the end of the cook time, without chiming. The oven remains in Sabbath mode, but is turned off.
  - If no cook time is set, the oven will not automatically turn off.
  - After a power failure, the display will turn back on in Sabbath mode, but the oven will be off.
  - Always close the oven door before engaging Sabbath Mode.
-