

Using the Sabbath Mode - LSIL6332FE

Top > OPERATION > Oven > Using the Sabbath Mode

Using the Sabbath Mode

Sabbath mode is typically used on the Jewish Sabbath and Holidays. When the Sabbath mode is activated, the oven does not turn off until the Sabbath mode is deactivated. In Sabbath mode, all oven and cooktop function buttons are inactive. sb will appear in the display.

Press Bake.

Set the desired temperature using the plus (+) or minus (-) keys.

Press START.

Press and hold Settings for 3 seconds. sb appears in the display when the Sabbath mode is activated.

To stop the Sabbath mode, press and hold Settings for 3 seconds. To cancel the Bake function, press CLEAR/OFF at any time.

NOTE

Sabbath mode is only available when the oven is in the Bake mode.

If a cook time is set, the oven turns off automatically at the end of the cook time, without chiming. The oven remains in Sabbath mode, but is turned off.

If no cook time is set, the oven will not automatically turn off.

After a power failure, the display will turn back on in Sabbath mode, but the oven will be off.

Always close the oven door before engaging Sabbath mode.

When Sabbath mode is activated, the cooktop elements does not turn on until the Sabbath mode is deactivated.