

# 36 SETTING OVEN CONTROLS

## Setting the Sabbath Feature for the Jewish Sabbath and Holidays



For further assistance, guidelines for proper usage, and a complete list of models with the Sabbath feature, please visit the web at [www.star-k.org](http://www.star-k.org).

Sabbath mode disables all audible tones or visual display changes on the oven control. The Sabbath feature may only be used with the bake function. Once the oven is properly set using bake with the Sabbath feature active, the oven will remain on until cancelled. The Sabbath feature overrides the factory preset 12 hour energy saving feature.

The oven light will turn off during the Sabbath mode and remain off until the Sabbath mode is canceled. before activating the Sabbath feature.

The meat probe feature is not available in Sabbath mode.

**Important:** The Sabbath mode will override the factory preset 12 hour energy saving mode, and the appliance will stay on until the cooking features are cancelled. If any of the cooking features are cancelled when the appliance is in the Sabbath mode, no audible or visual indicators will be available to verify the cancellation.

If the oven interior lights are needed, be sure to activate them prior to setting the Sabbath mode. Once the oven light is turned on and the Sabbath mode is active, the oven light will remain on until the Sabbath mode is turned off and the oven lights are turned off.

The oven door will not activate the interior oven lights when the oven door is opened or closed.

### WARNING

Food poisoning hazard. Do not let food sit for more than one hour before or after cooking. Doing so can result in food poisoning or sickness.



Display showing Sabbath is active

To set the oven for baking and activate the Sabbath feature:

1. Be sure the clock is set to the correct time of day. Place food in the oven.
2. Turn the oven mode selector to BAKE.
3. Turn the oven temperature selector to the desired bake temperature. An acceptance chime will sound, the oven will start heating and the LED lights will stop blinking and remain on.
4. To enter Sabbath mode press and hold the oven light key and the clock key at the same time for about 3 seconds. The control will sound an acceptance chime and SAB will appear in the display below the time of day.
5. During the Sabbath mode all normal sounds of the oven control will be turned off. However the control will allow any sounds associated with alarms.
6. During Sabbath operation the oven temperature may be changed by adjusting the oven temperature selector.

To turn off the Sabbath feature:

1. Turning the oven mode selector and the oven temperature selector to the OFF position will cancel BAKE only.
2. To turn off the Sabbath feature press and hold both the oven light key and the clock key for about 3 seconds.
3. The acceptance chime will sound and SAB will disappear from the display. Be sure both oven selectors are returned to the OFF positions

Power failure while using Sabbath feature:

Should you experience a power failure or interruption, the oven will shut off. When power is returned, SF (Sabbath Failure) will display, and the oven will not turn back on automatically.

Remove the food when the power failure occurs. You may only start the oven once during Sabbath/Jewish holidays.

After the Sabbath observance turn off the Sabbath feature. Press and hold both the oven light and clock keys for at least 3 seconds. SAB will disappear from the display, and the oven may be used with all normal functions.